




What to do if...
What to do if...

	A tire punctures	P. 897	If you have a flat tire
	The engine does not start	P. 912	If the engine will not start
		P. 145	Engine immobilizer system
		P. 922	If the vehicle 12-volt battery is discharged
	The hybrid system does not start	P. 914	If the hybrid system will not start
		P. 147	Immobilizer system
		P. 925	If the vehicle 12-volt battery is discharged
	The shift lever cannot be moved out	P. 916	If the shift lever cannot be shifted from P
	The engine coolant temperature gauge enters the red zone	P. 930 P. 933	If your vehicle overheats
	Steam can be seen coming from under the hood		
	The key is lost	P. 917	If you lose your keys
	The 12-volt battery runs out	P. 922 P. 925	If the vehicle 12-volt battery is discharged
	The doors cannot be locked	P. 79	Side doors
		P. 82	Back door
	The horn begins to sound	P. 149	Alarm

What to do if...



The vehicle is stuck in mud or sand

P. 938

If the vehicle becomes stuck



A warning light or indicator light comes on

P. 858

If a warning light turns on or a warning buzzer sounds...

► RX350



► RX450h



■ Warning lights



Brake system warning light

or



P. 858



Brake system warning light

P. 859



"ABS" warning light

or



P. 859



Low fuel level warning light

P. 861



SRS warning light

P. 859



Open door warning light

P. 861



Charging system warning light

P. 858



Malfunction indicator lamp

or



P. 859



Driver's seat belt reminder light

P. 861



Front passenger's seat belt reminder light

P. 861



Master warning light

P. 861



Electric power steering system warning light

P. 859



Pre-collision system warning light*

P. 859



Tire pressure warning light

P. 861



Slip indicator

P. 859

*: The light flashes to indicate a malfunction.